



Piping / Recirculation Diagram
Master Mixers and Hi/Lo's

Recirculation with Aquastat Control ■

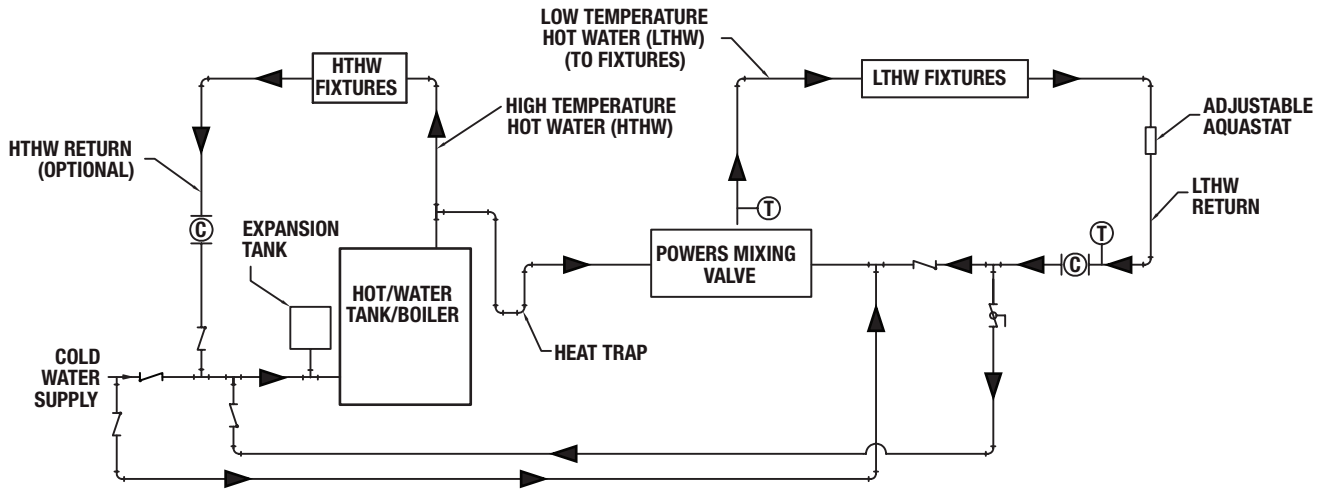

Continuous Recirculation ■

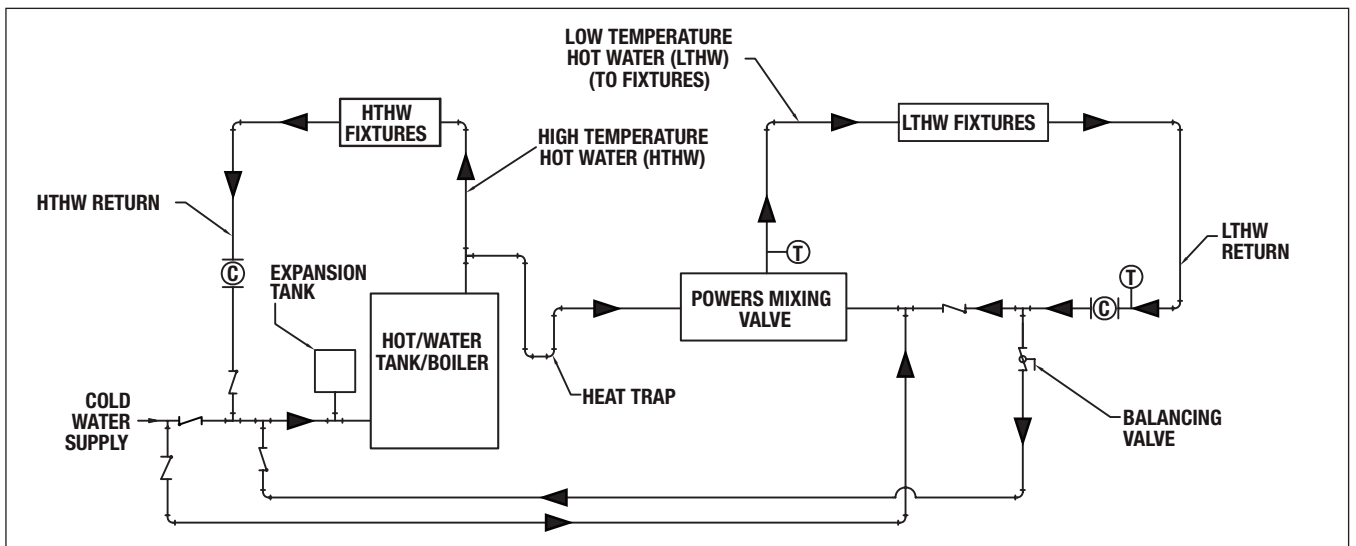


Ⓢ Select flow rate as necessary to ensure Powers mixing valve is operating at an ASSE 1017 minimum certified flowrate. See Literature.

NOTE: To balance the system begin with diverting 80% of the return water to cold side of the tempering valve (20% to the hot water source). Continue adjusting until system is fully balanced.

Ⓢ	TEMP/PRESSURE GAUGE
▶	FLOW DIRECTION
∨	CHECK VALVE
⚖	BALANCING VALVE
⚖	AUTOMATIC BALANCING VALVE
Ⓢ	CIRCULATOR

Continuous Recirculation* ■

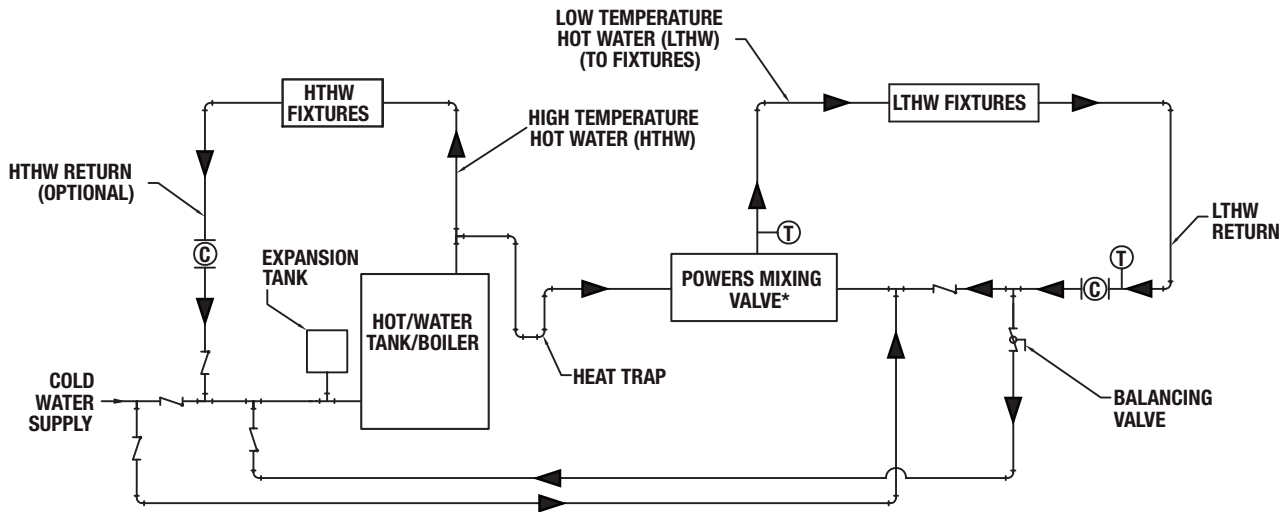

*MUST RUN RECIRC PUMP CONTINUOUSLY WHEN REQUIRED MINIMUM FLOW IS LESS THAN OR EQUAL TO THE VALVE MINIMUM FLOW (REFER TO LITERATURE).

NOTE: To balance the system begin with diverting 80% of the return water to cold side of the tempering valve (20% to the hot water source). Continue adjusting until system is fully balanced.

Ⓣ	TEMP/PRESSURE GAUGE
▶	FLOW DIRECTION
∨	CHECK VALVE
⚖	BALANCE VALVE
Ⓢ	CIRCULATOR

ENGINEERING APPROVAL

Project: _____
 Contractor: _____
 Architect/Engineer: _____

POWERS™

A Watts Water Technologies Company

**ISO 9001-2000
 CERTIFIED**

USA: Phone: 1.800.669.5430 • Fax 1.847.229.0526 • www.powerscontrols.com
 Canada: Phone: 1.888.208.8927 • Fax 1 888 479 2887 www.powerscontrols.ca