


1" CrimpAll™ Tool

1" CrimpAll Tool PCCRT5
(Includes CrimpAll tool, 1" jaw, crimp gauge, and adjustment tools)



CrimpAll Tool Adjustment

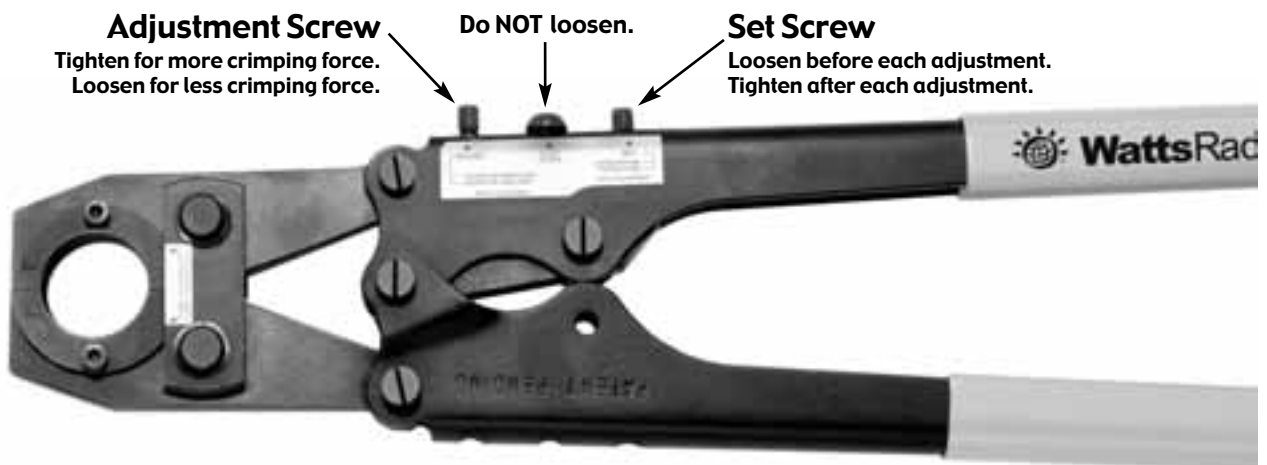

CrimpAll Jaw Installation

1. Loosen the screws.
2. Remove crimping jaws.
3. Insert new crimping jaw set.
4. Tighten the screws with the tool closed, and you're ready to crimp.


Extra jaw screws included in kit.



Using the Go/No-Go Crimp Gauge


NO GO!

The CrimpRing is not compressed enough, and will not slide into the "GO" slot of the gauge.

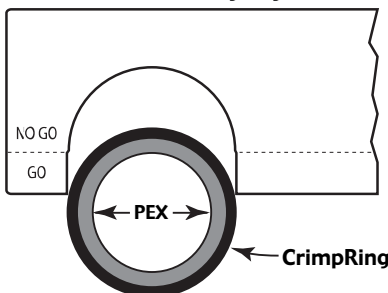

GO.

The CrimpRing slides into the "GO" slot, but stops at the shoulders in the "GO" slot.

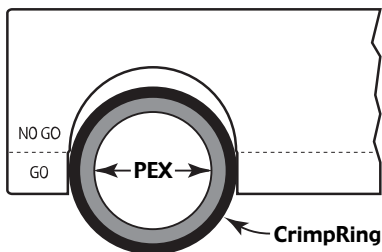

NO GO!

The CrimpRing is compressed too small, and slides all the way into the "NO GO" slot.

